

# Esko display stand assembly instructions

## Important Note

The stand is intended to be set up against a wall or back-to-back against other stands.

**For safety/stability reasons, Esko does NOT recommend using the stand as a free-standing display unless it is set up with two pairs of feet as a two-sided island display.**

Stands can be assembled by one person but it's easier if two people are available.

Begin with the two uprights; the bottom of the upright is the end with larger slots in it to accept the feet.





Slot the feet into the upright. If necessary, use a mallet, or similar, to tap the connection home. A second set of feet can fit on the other side of the upright if the stand is being assembled as a two-sided island display.



Each unit is supplied with two earthquake securing brackets (one for each upright of the stand) as shown below. These are designed to secure the unit to the wall to prevent it toppling accidentally in the event of severe earthquake. Where the stand is mounted against a wall, we recommend they are used. Mark the correct position and fix them to the wall using appropriate anchors, with the lugs pointing upwards, to locate at some position near the top of the stand. Drop the assembled upright and feet down over the lugs so the upright is held by the bracket.



Starting from the bottom, drop the pegboard sections into place, slotting them into the inner series of slots in the uprights and tapping down as necessary.

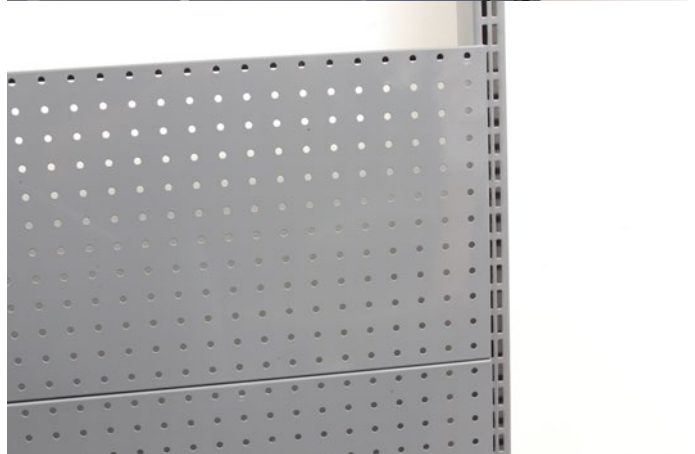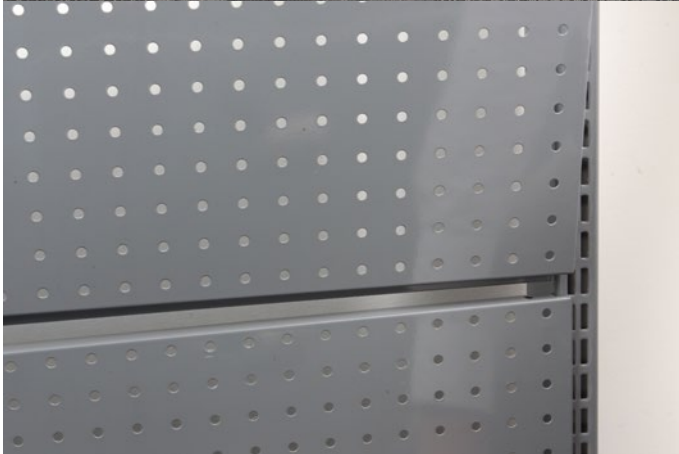

Seven pegboard sections are required to complete the stand from top to bottom. **Take care as the stand may overbalance easily until the shelves are added. It's better to do this part with the stand located close up to a wall.**



Add the shelf brackets at the desired heights (300mm and 400mm shelves have different length brackets), slotting them also into the inner series of slots in the uprights. Drop the shelves into position on the brackets. The bottom shelf does not need any brackets, it sits in the guide on top of the feet.




With the shelves added, the stand will be stable enough. Move the stand to sit in its intended display location. Add the kickplate to the bottom front.






If not already affixed to the steel header panel, peel off the backing strip from the adhesive tape on the acrylic Esko logo panel. Ensure the steel header pelmet panel is clean. With the tabs on the header panel facing to the bottom of the panel so that the logo is affixed right side up, carefully line the acrylic logo panel up to the left-hand side of the header pelmet panel. (The acrylic panel is shorter than the steel panel; a grey strip is intended to be visible on the right-hand side of the header.) With the acrylic logo panel positioned correctly, press it firmly onto the steel panel to bond the adhesive tape.

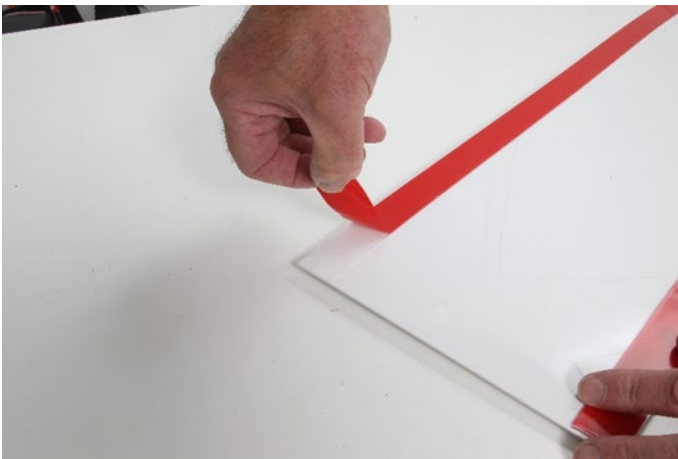


Fit the side supports of the header panel into the inner series of slots in the uprights, so that the top lines up with the top of the upright. Slot the tabs of the assembled header panel into the side supports.

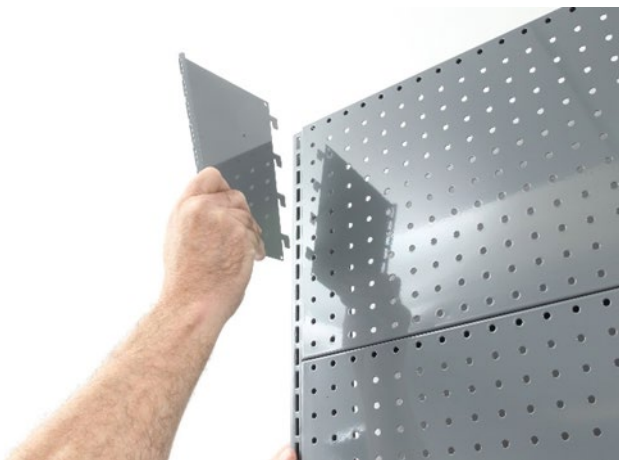

Drop the top cover on top of the stand.



Each stand comes with two header securing plates, shown below. Place these at the sides of the header and secure by pressing in the plastic rivet retainers. Ensure these plates are fitted, they hold the header steady and prevent customers accidentally dislodging it.

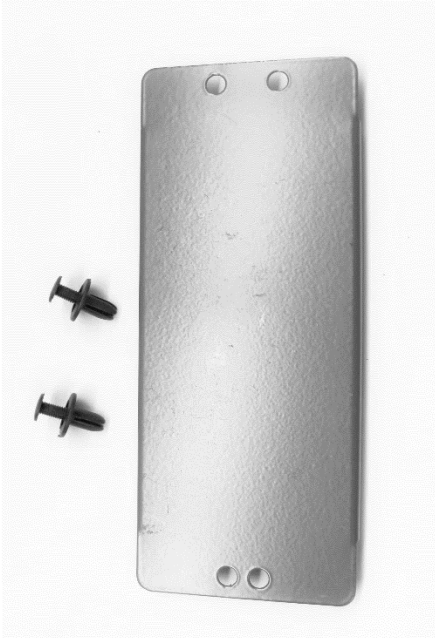

## Display Accessories

Complete the stand by adding any of the Esko display accessories. Available:

- 150mm prongs with plastic price/label swing tag
- 200mm prongs with plastic price/label swing tag
- Helmet display mount
- Basket shelf (280 x 280mm)
- Cone bar basket (holds up to seven cone bars)
- Half shelf (300 x 500mm)
- Lockable eyewear display bar





150mm prongs in use




Prongs with plastic price/label swing tag




Half shelf fitted on support bar



Basket shelf

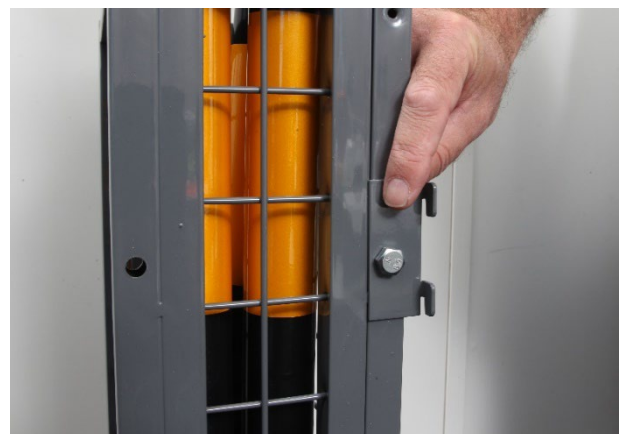

Cone bar basket (RH picture shows bolting on the support tabs)

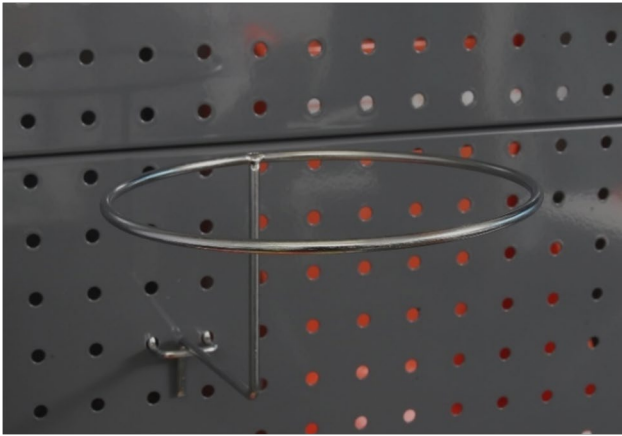

**Helmet display prongs**



**Lockable eyewear display bar**